PA-460R Technical Information

Inputs 1 to 4:

Inputimpedance / Level: Input Inputimpedance: Mic Tonecontrol: Bass / Treble Inputimpedance / Level: Return I Outputimpedance / Level: Send I

Inputimpedance / Level: Aux / CD / Tape Outputimpedance / Level: Send II Inputimpedance / Level: Return II Outputimpedance / Level: Output

Tonecontrol: Bass / Treble

Output Power (RMS/max. peak-peak)

Frequency

Speakercabinet (RMS/max. peak-peak)

Consumption

Fuse

 $100k\Omega$ / 0dB 600Ω symmetrical

50Hz +/- 16dB / 8kHz +/- 16dB

 $25k\Omega / 0dB$ $1k\Omega / 0dB$ $30k\Omega / -10dB$ $15k\Omega / +10dB$ $10k\Omega / +10dB$ $1k\Omega / +10dB$


50Hz +/- 16dB / 4kHz +/- 16dB

60/120 Watt RMS on 8Ω +/- 3dB 32Hz-26.000Hz

2 Way bass-reflex-system 60/80Watt/8 Ω with: HT-Horn, 10" Bass and stand-adaptor

max. 160Watt

120V/4A slow blow or 230V/2A slow blow

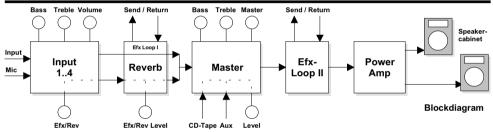

CLEANING:

Wipe it clean with a lint free cloth. Never spray cleaning agents onto the cabinet. Avoid abrasive cleansers which would damage the finish.


CAUTION:

- 1 Before using the PA-460R read this Owners' Manual thoroughly.
- 2 Do not open the unit! No user serviceable parts inside.
- 3 Refer servicing to qualified service personnel.
- 4 This amplifier is capable of producing high sound pressure levels. Continued exposure to high sound pressure levels can cause permanent hearing impairment or loss. Ear protection is recommended if this amplifier is operated at high volume.
- 5 Do not use in dusty, wet or extremely hot environments.
- 6 Contact qualified service personnel immediately if:
 - * The housing is damaged and the unit does not work properly
 - * Small items or liquids of any kind penetrate the unit
 - * in the event of any other problem

Specifications and information in this manual are subject to change without notice!

(c) 1999 NOBELS Electronics - Barnerstrasse 42 - 22765 Hamburg - Germany http://www.nobels.com - info@nobels.com

Designed in Germany - Made in Korea

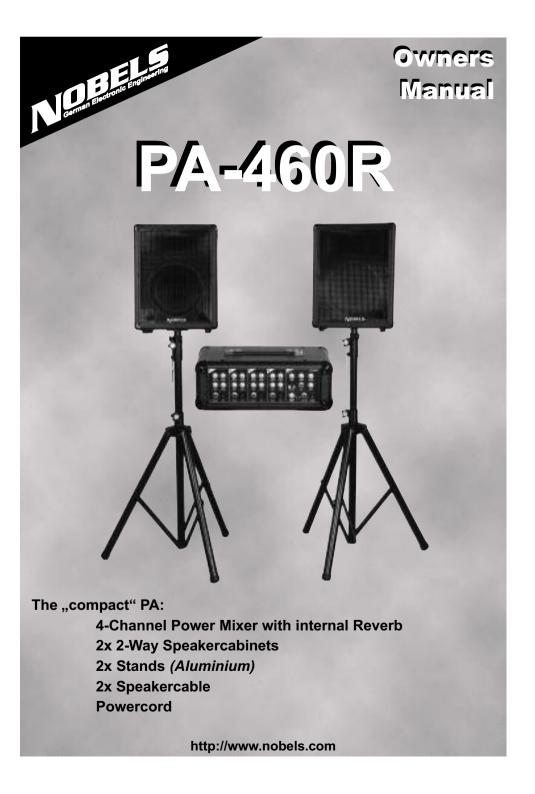

NOBELS PA-460R 4 Channel Power Mixer

Welcome to the NOBELS-Family!

It's that simple! Just connect, switch on, ready! For those who like to know more:

Here is the detailed manual:

Input 1 to 4

(1) Volume Control

Adjusts the volume of a channel.

(2) Efx/Rev Control

Adjusts the amount of reverb for a channel. If using an external Efx-device (e.g. digital reverb): Adjusts the amount of effects of the external device.

(3) Bass Control

Adjusts the low frequencies per channel.

(4) Treble Control

Adjusts the high frequencies per channel.

(5) Instr. Input

Standard jack (6,3mm/unsymmetrically) Connect to musical instruments.

(6) Mic Input

XLR-input (600 Ω / symmetrically).

Master (Output Section)

(7) Bass Control

Adjusts the overall amount of low frequencies.

(8) Treble Control

Adjusts the overall amount of high frequencies.

(9) Master Control

Adjusts the overall amount of volume.

(10) CD-Tape Input

To connect a CD-player or tape-deck. (2x cinch jacks)

(11) Aux Input

Input for other sources. (6,3mm Standard jack)

(12) Level Control

Adjusts the volume of the CD-Tape input or Aux input. You should use only one of the inputs at a time.

Effect-Section

(13) Efx/Rev Control

Adjusts the return signal of the internal reverb. If using an external device, its return level will be controlled.



Aufstellen und Inbetriebnahme


1 Stands

Release the handscrew (1) and spreiz the 3 legs (2) until it covers an area of at least 1qm. Fasten the handscrew (1). Release the heightadjustment (3) and adjust it to a prefered height. It is important to save it with the safety-splint (4) sichern. Set the cabinets on the stands.

Check for safety stand. Make sure the speaker cables are not a gefahr to stolper. If neccessary save it with tape. Please note: The Aufsteller haftet for all Sach- und Personenschäden, caused by unprofessional aufstanding!

2 Mixer

Connect the power cord. Adjust the master volume to zero. Connect both speaker cabinets to the amplifier. Connect your instruments. Switch the units on. Adjusts the master volume to your desired level. Watch the clipping Led!

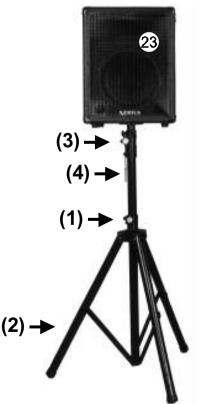

(14) Clip Led (Green)

If the output is overloaded the led will light up. If the green led is blinking steadily, then reduce the master volume! This will prevent distorted sound and damages of the connected speaker cabinets

(15) On Led (Red)

Lights up when switching the power on.

(16) Line Out Output

External output to connect a secondary power amplifier or to connect to a tape-deck for recording.

(17) Power Switch

Switches the PA-460R on or off.

Backside (not shown)

(18) Fuse 2A(T)

Fuseholder with 230V/2A Slow-blow fuse.

(19) 230V AC 50/60Hz Powerjack

Power jack for included power cord. Before connect, check for correct voltages.

(20) 2x Output Jacks

6,3mm output jacks to connect to the speaker cabinets. (speaker cables included)

(21) Effect Loop 2

Parallel Efx loop for external effect devices. Especialy for reverb or delay *(Echo)*. Connect the input of the device to the send jack. Connect the output of the device to the return jack.

(22) Effect Loop 1

Serial Efx loop between the input channels and the power amplifier. Best for compressor/limiter or graphic equalizer. Interupts the signal way when plugged in. Connections like (21).

(23) Speaker cabinets

Connect to the amplifier. An additional output jack can be connected to other speaker cabinets. *(min. load 80hms)*

We wish you fun and success!